

 





LED Radiance Light Installation Instructions

(Base Part #: 69231BNS)

PARTS NEEDED:
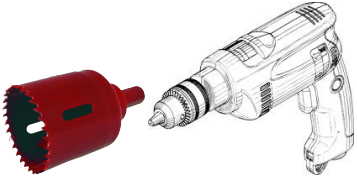
| | | | |
|---|---|--|---|
|  |  |  |  |
| Radiance Overhead Light | Wire Nuts (not provided) | Power Drill w/ Hole Saw Bit | Mounting Screws (not provided) |

 
Safety Instructions

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Light is rated for interior installation only, do not install in wet locations.
- Operating Voltage: 10 - 14V DC
- Do not install any luminaire assembly closer than 6" from any curtain or other combustible material.


1. Determine where your LED light fixture will be installed. Once determined, drill a 2.25" hole using a hole saw.



2. Use the wiring diagram below to wire the light to the units power.

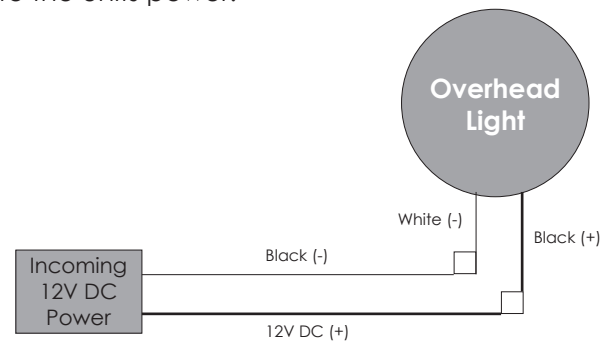

 3. Remove cover by twisting counter clockwise. Mark location of screw holes and pre-drill. Screw in fixture and re-install cover by twisting clockwise.

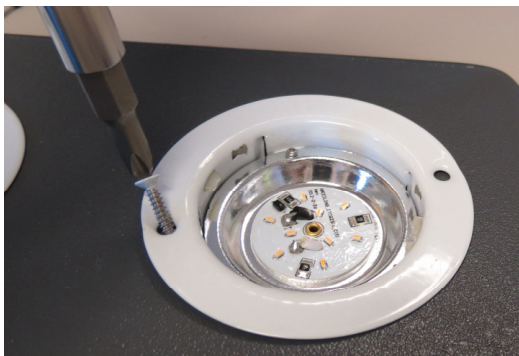

For warranty information please visit www.itc-manufacturersselect.com/warranty

ITC Incorporated • 3030 Corporate Grove Dr. • Hudsonville • MI • 49426

Phone: 616-396-1355 • www.itc-manufacturersselect.com • Doc #: MS69231BNS • Revision A: 05.02.19