



LED Radiance Light Installation Instructions

(Base Part #: 69240)

PARTS NEEDED:		
		
Radiance Overhead Light	Wire Nuts (not provided)	Power Drill w/ Hole Saw Bit


Safety Instructions

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Light is rated for interior installation only, do not install in wet locations.
- Operating Voltage: 10 - 14V DC
- Do not install any luminaire assembly closer than 6" from any curtain or other combustible material.

1. Determine where your LED light fixture will be installed. Once determined, drill a 2.25" hole using a hole saw.



2. Use the wiring diagram below to wire the light to the units power.

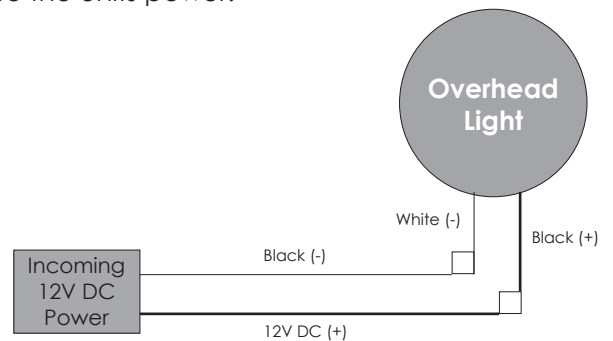

3. Push clips on both sides of light up and slide housing and clips through hole. Clips will snap down and hold the light in place.



For warranty information please visit www.itc-manufacturersselect.com/warranty

ITC Incorporated • 3030 Corporate Grove Dr. • Hudsonville • MI • 49426

Phone: 616-396-1355 • www.itc-manufacturersselect.com • Doc #: MS69240 • Revision A: 05.02.19