




Transom Shower Install Instructions

(Part #: 97014)


PARTS/TOOLS NEEDED:

	Hole Saw Bit 3.125"	Power Drill w/ Phillips Bit	7/64" Drill Bit	Needle Nose Pliers
Transom Shower Includes: Nylon or SS Hose, Mesh Bag, Zip Tie, Rubber Washers & Mounting Screws	Not Provided	Not Provided	Not Provided	Not Provided


IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

* To avoid a hazard to children, account for all parts and destroy all packing materials.

- Determine the installation location for your shower. Once determined use a hole saw to drill a 3.125" hole.

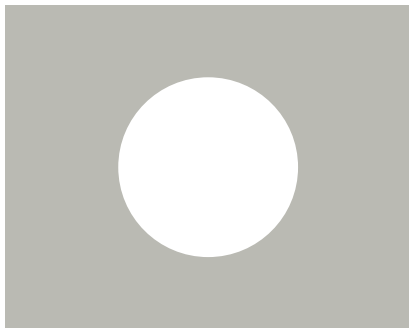

- Attach the mesh bag with the zip tie. Keep the zip tie head on the flat side of the shower cup. Use pliers to tighten zip tie securely to the shower cup. Cut the excess zip tie off with scissors.

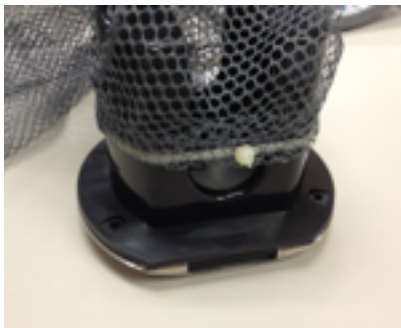

- Use the shower cup screw holes as a pilot and pre drill holes. Drill the top hole first and install the screw. Align the cup and drill the bottom holes using 7/64" drill bit. Do not over tighten these screws.



- Attach cone connector on the hose to the spray head using the larger washer. Push hose into cup and mesh bag.
- Put the smaller washer into the 1/2" hex water supply connector. Fish out the water line in the unit and attach hose to water supply line.
- Cinch the zip tie to the hose with needle nose pliers.
- Test with the water pump to ensure there are no leaks at the connections.

