







# Corona LED Light Installation Instructions

(Base Part #: 69235)

## PARTS/TOOLS NEEDED:

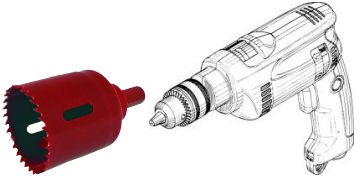			
Corona Overhead Light	Wire Nuts (not provided)	Power Drill w/ Hole Saw Bit	Mounting Screws (not provided)


## Safety Instructions

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Light is rated for interior installation only, do not install in wet locations.
- Operating Voltage: 10 - 14V DC
- Do not install any luminaire assembly closer than 6" from any curtain or other combustible material.

1. Determine where your LED light fixture will be installed. Once determined, drill a hole using a hole saw (see chart below for hole size requirement).



2. Use the wiring diagram below to wire the light to the units power.

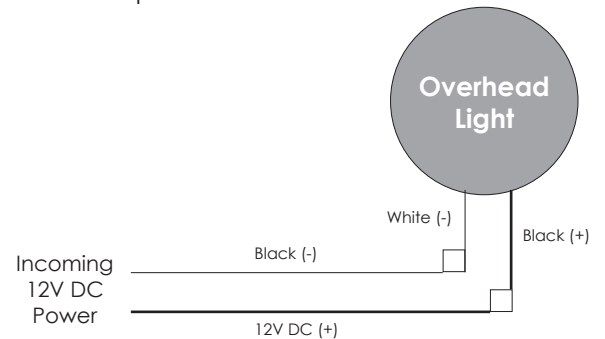

3. Insert the light in the 3.5" cut out. Mark location of screw holes and pre-drill. Screw in fixture.



4. Attach the bezel onto light by twisting clockwise until it is locked.



For warranty information please visit [www.itc-manufacturersselect.com/warranty](http://www.itc-manufacturersselect.com/warranty)

ITC Incorporated • 3030 Corporate Grove Dr. • Hudsonville • MI • 49426

Phone: 616-396-1355 • [www.itc-manufacturersselect.com](http://www.itc-manufacturersselect.com) • Doc #: MS69235 • Revision A: 05.02.19