






# Decor™ LED Overhead Light Installation Instructions


(Base Part #: 69926B)

PARTS/TOOLS NEEDED:		
		
Decor Overhead Light	Butt Splice Connectors (Not Provided)	Power Drill & 2.5" Hole Saw


## IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- \*Disconnect power before installing, adding or changing any component.
- \*To avoid a hazard to children, account for all parts and destroy all packing materials.
- \* It is recommended that fuse protection be added to the positive(+) input.

1. Determine the installation location and drill a 2.5" hole using a hole saw

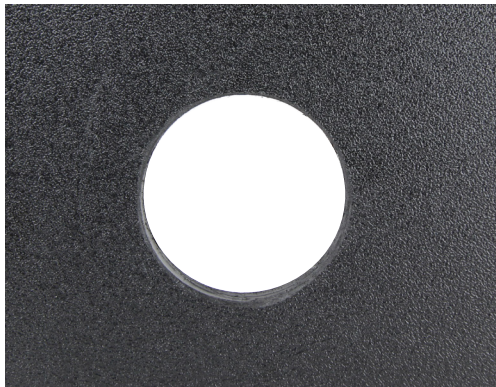

2. Using the wiring diagrams below, wire the light to the incoming 12V DC power. Test the light.

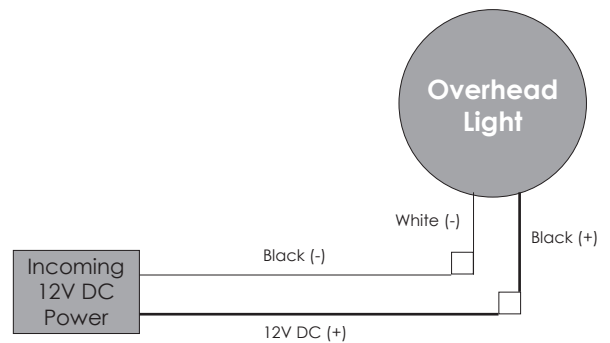

3. Push clips on both sides of light up and slide housing and clips through hole. Clips will snap down and hold the light in place.



For warranty information please visit [www.itc-manufacturersselect.com/warranty](http://www.itc-manufacturersselect.com/warranty)

ITC Incorporated • 3030 Corporate Grove Dr. • Hudsonville • MI • 49426

Phone: 616-396-1355 • [www.itc-manufacturersselect.com](http://www.itc-manufacturersselect.com) • Doc #: MS69926B • Revision A: 05.02.19